



BUENA VISTA

Pitching instructions - english

Assemble the poles by interlocking the single shock-corded segments.
Close all doors and windows.
Carefully select your final campsite.

STEP 1

Spread the flysheet on a clean and flat surface placing the door in the desired direction.

Insert the assembled poles into the colour marked pole sleeves (matching colours) :

- Central pole – yellow
- Corner poles – black
- Side poles - grey

STEP 2

Insert the central pole (marked yellow) into the grommets located on the pole sleeve for the side poles.

Now insert the end of the corner poles (marked black) and the end of the side poles (marked grey) down over the Ring-Pin system.

Go to the opposite end of the poles and form an arch by using some pressure until it is possible to fix the pole ends on the corresponding pins.

Your flysheet will be erected now.

STEP 3

Secure the flysheet by pegging down the corners loops. Start from the front and proceed to the rear ensuring that the tent walls are taut and straight.

Open the entrance and attach the inner tent to the loops placed on the strap inside the flysheet.

Secure the inner tent to the ground with the pegs supplied.

Always ensure not to exceed the tension.

STEP 4

Place the groundsheet and secure it to the ground with the tent pegs supplied.

Eventually secure the whole tent against strong wind with the included guy ropes and pegs.

ATTENTION: Clean up and dry out tent before storage and transport.